HORNING



SERIES 3.0

OPERATING & INSTALLATION INSTRUCTIONS PARTS LISTS

FOR NEW HOLLAND 900 FORAGE HARVESTERS

> HORNING MFG LLC 301 TWIN SPRINGS CT NEW HOLLAND, PA 17557

> > 2020

OPERATING INSTRUCTIONS

1. Shut off all power to machine before servicing.


- 2. Grease all bearings and zerks every 8 to 10 hours (Roll bearings 1/2 to 1 pump each).
- 3. Bearings should operate under 200° F. Spit Test: If it doesn't sizzle (212°), assume normal operation.
- 4. New belts should be checked every hour for the first 5 hours of operation, daily thereafter.
- 5. Check roll clearance daily.
- 6. Roll clearance should be 1/16" as a starting point.
- 7. Increase roll gap according to moisture.
- 8. It may be necessary to lightly tap adjustment blocks downward when decreasing roll gap.
- 9. Recommended cut length for corn silage is 3/4".
- 10. Emergency stop (1/2" bolt with coupler nut between taper blocks) is factory set to keep rolls from hitting each other. See illustration **A**.
- 11. Large processor springs should be compressed to 4 7/8". (Rolls should not open under normal conditions.)
- 12. If knives, etc go through processor, measure springs. (Free length should be 5 1/4". Replace springs if less.)
- 13. Wash down unit at end of season and apply a coating of oil or grease to all unpainted surfaces, especially rolls.

CHANGEOVER TO HAYLAGE

- 1. Release spring loaded pins, and remove pan between auger and processor. (You may have to rotate auger to clear pan handle and latches.)
- 2. Remove belts for haylage.
- 3. Note: When putting pan back in for corn, make sure bottom end of pan is on top of step.

BELT TENSION

Tensioner spring should be compressed to 1/8" gap between spacer and washer. If your machine doesn't have a spacer, press down all belts at once. Belts should deflect 1/4" with 20 lbs. down pressure (3-belt model), and 1/4" with 25 lbs. down pressure (4-belt model). See illustration below. For ease of belt installation adjust rolls completely together.

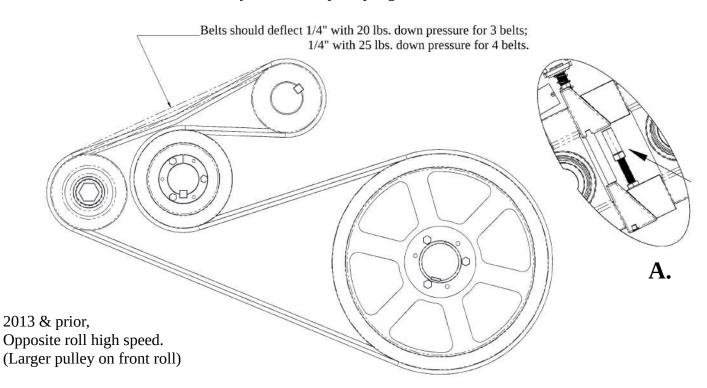

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTION	
Hot Bearings	Side strain from improper installation	Loosen locking collars to release strain, then re-tighten	
	Over greasing	Use only ½ to 1 pump of grease per bearing	
Plugging in front of rolls	Feed pan not installed properly	Position properly	
	Dried material on pan from previous season	Clean pan	
	Knives too far from pan	Reset knives	
	Roll teeth worn dull	Replace rolls	
Processor rattles excessively when under load, from springs opening	Springs too loose or smashed From foreign material	Measure free length of springs. If less than 5 1/4", replace springs.	
up	Too long cob pieces	Reduce cut length to 3/4"	
	Rolls set too close for volume of crop	Adjust roll gap	
Belts twisting, breaking, or getting	Misaligned sheaves	Align sheaves	
hot	Belts too tight	Properly adjust belt tension	
	Pan bent or out of line	Replace pan	

Contact your dealer about any additional problems.

Note: To check pan alignment, lay flexible ruler on inside of pan when installed. Slide ruler up toward roll till it hits, then feel where ruler is hitting on roll. Should be within a 1/4" of center of rolls. Always wear gloves.

PARTS LISTS

FIGURE 1 PARTS LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	S2108	NH 900 Right shield	1
2	S2110	NH 900 & FP230 Center shield	1
3	S2109	NH 900 Left shield	1
4	S2122	NH 900 Lower back lid	1
5	CS38x4G5	3/8"x4" NC Gr.5 Cap screw zinc plated	3
6	FW38SAE	3/8" SAE Flat Washer	3
7	42377	Left shield spacer	2
8	CB14x12	1/4"x1/2" NC Carriage bolt zinc coated	18
9	FN14	¹ / ₄ " NC Serrated Flange Nut zinc	18
10	HC371	Rubber Hood catcher	3
11	D1039	Warning sharp rolls (orange & white)	1
12	D1060	Horning Kp 3.0 series for NH (yellow)New Style	1
13	D1004	Small gray roll adjustment Decal	1
14	D1040	Warning rotating parts (orange & white)	2
15	D1035	2x3 Red Reflective Decal	1
16	D1065	Yellow Horning Krop Processor Logo	1
17	D1008	Horning Address label	1

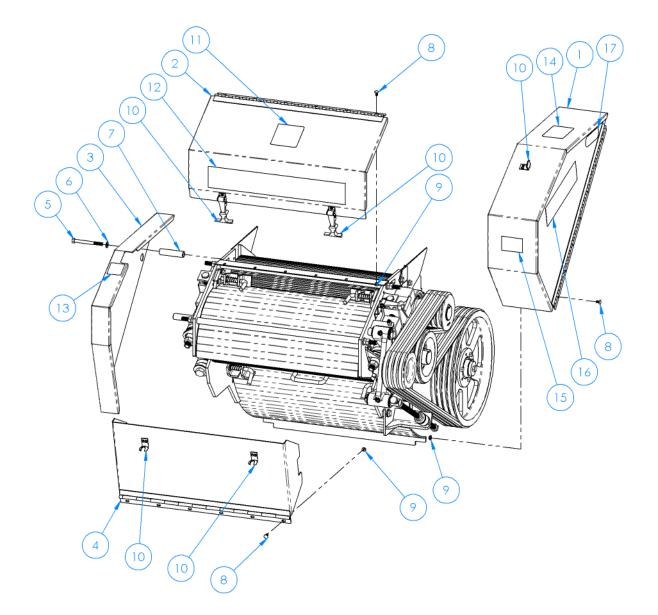


FIGURE 1 Shields

FIGURE 2 PARTS LIST

ITEM NO. PART NUMBER DESCRIPTION				
			QTY.	
1	P1544B**	15.4" 4-B SF Sheave	1	
2	P464BSB**	4.6 4B groove 2'' Straight bore	1	
3	P664BK**	6.6 4B SD pulley w/SD 2" bushing and 1/2" broached keyway		
4	BB118K-4**	BB118K Belts set of 4	1	
5	42370	NH 900 & 892 drive adapter	1	
6	42413	Heavy drive adapter washer	1	
7	CS12x4G8	1/2"x4" NC GR.8 Cap screw Z/Y	1	
8	42351	FP230 & 900 Pan	1	
9	42357	FP230 & 900 Return hood	1	
10	42342**	NH 900 right end frame	1	
11	R9003.0**	NH 900 or FP230 3.0 Roll Several styles available	2	
12	42343**	NH 900 left end frame	1	
13	42362	230 & 900 Pipe hinge holder	1	
14	42330	FP 230 & 900 Spacer pipe	1	
15	42331	FP 230 & 900 redi-rod for spacer pipe 1/2" NC B7 rod 28"	2	
16	FN12	1/2" NC Serrated Flange Nut zinc	4	
17	N12	1/2" NC Nut (zinc coated)	4	
18	42332	Fp & 900 belt tightener bracket	1	
19	LN58S	5/8"Stover (steel) Locknut (zinc coated)	1	
20	SP542	#542 zinc/yellow Die spring Idler tightener	1	
21	42320	4 Groove belt tension spacer 1.438'' L	1	
22	FW58	5/8" Flat washer (zinc coated)	1	
23	N58	5/8" NC Nut (zinc coated)	3	
24	42326	5/8"x18" NC Ready Rod W/ Nut Welded	1	
25	FW12SAE	1/2" SAE Zinc Plated Flat Washer	1	
26	CS12x1G5	1/2x1 Gade 5 zinc Capscrew	1	
27	FB38x1G5	3/8"x1" NC Gr.5 Serrated Flange bolt zinc plated	1	
28	FN38	3/8" NC Serrated Flange Nut zinc	1	
29	KEY12x12x3	1/2x1/2x3" Key	1	
30	SS38x58	3/8"-16 x 5/8" set screw	4	
31	BUSF212**	SF 2 1/2" Bushing	1	
32	KEY516x58x2	5/16"x5/8"x 2" key	1	
33	CS38x2G8	3/8"x 2" NC Gr.8 full thread Cap Screw Z/Y	3	
34	KEY12x12x2	1/2x1/2x2" Key	1	
35	42306**	3.0 4-Groove Idler Arm	1	
36	CP316x112	3/16"x1 1/2" Plated cotter pin	1	
37	MW1	1" Machinery washer 14Ga.	A/R	
L	** 2013 & prior s			

** 2013 & prior, see page 12

FIGURE 2 PARTS for FIBER-TECH Model

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
2	P424BSB**	4.2 4B groove 2'' Straight bore	1
3	P704B**	7.0" 4-B SK Sheave	1
38	BUSK2**	SK 2'' Bushing	1

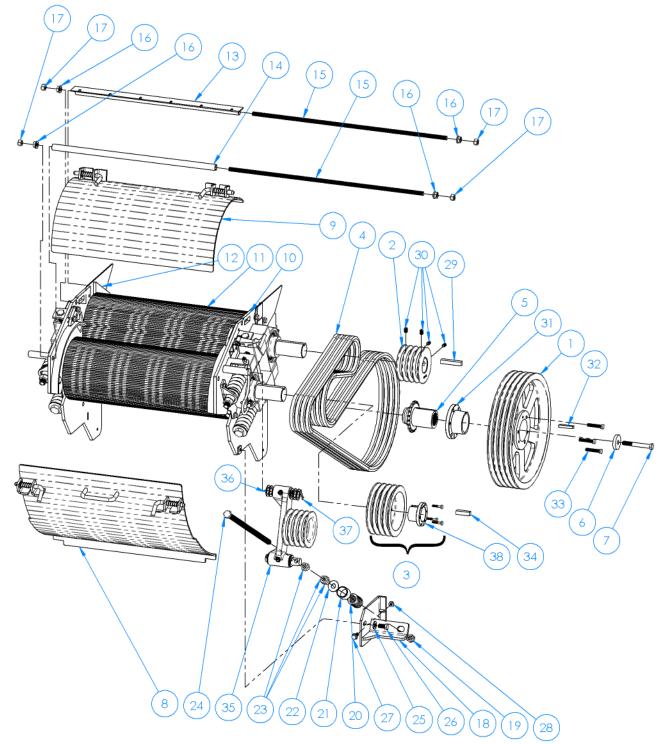


FIGURE 2 Processor Assembly

Note: This parts list is for NH 900 harvesters serial # 741495 and later. SN 741494 and prior have different processor pulleys and belts than later models. Call your dealer for more information.

	FIGURE 3 PARTS LIST			
ITEM NO	D. PART NUMBE	RDESCRIPTION	QTY.	
1	CS34x15	3/4"x15" NC Gr.8 Cap screw Z/Y	1	
2	CS34x14	3/4"x14" NC Gr.8 Cap screw Z/Y	1	
3	SP55	Heavy 5.5" KP spring Zinc Yellow	2	
4	FW34G8	3/4" Flat washer Gr.8 (Y/Z coated)	2	
5	42303	Back End Bolt Support Bushing	1	
6	LN34S	3/4" Stover (steel) Locknut (zinc coated)	2	
7	BR2112PBHD	HD 211's 2" Eccentric Lock Wide race HD Pillow Block Bearin	2	
8	42342**	NH 900 right end frame	1	
9	42424	Taper Block Assembly	1	
10	GH12	12" Grease hose 1/8"NPT Male both ends	1	
11	GF1009	1/8" NPT straight female grease zerk	1	
12	42382	Back end bolt support	1	
13	42381**	Return hood catcher plate	1	
14	42380**	Catcher plate spacer	1	
15	42384**	NH 900 & FP Rear slot cover	1	
16	42385**	NH 900 Front slot cover	1	
17	FB38x12	3/8''x1/2'' Gr5 serrated flange bolt zinc plated	4	
18	HC371	Rubber Hood catcher	1	
19	MS10-24x112	10-24 x 1 1/2" Pan Head Machinery Screw	1	
20	LN10-24N	#10-24 Nylon Lock nut	1	
21	FB38x1G5	3/8"x1" NC Gr.5 Serrated Flange bolt zinc plated	2	
22	CB38x1	3/8"x1" NC Carriage bolt zinc coated	2	
23	FN38	3/8" NC Serrated Flange Nut zinc	2	
24	D1064	Custom serial # plate (Aluminum)	1	
25	D1018	Belt Routing decal	1	
26	D1046**	Belt part # BB118k-4 decal	1	
27	M4538	211's Heavy Duty Pillowblock bearing casting	2	
28	BR2112	SKF 211's 2" Eccentric Lock Wide race Bearing insert	2	
29	GF1010	1/8" NPT 90 Degree Male grease Zerk	1	
30	TB58x3NFG8	5/8"x3"NF Gr.8 Tapping bolt	1	
31	42423	Adjustment Lockplate	1	
32	SP250	Lock plate Spring	1	
33	62055	Taper Block Assembly	1	

** 2013 & prior, see page 12

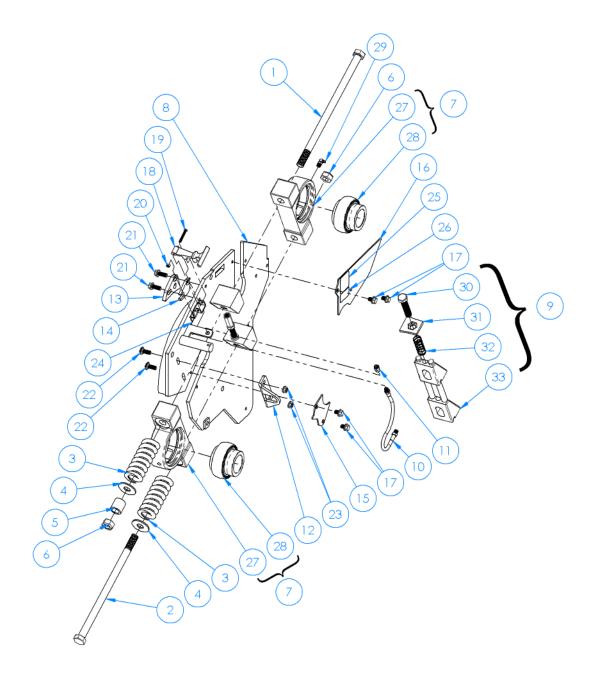


FIGURE 3 Right End Frame

Note: All parts on left end frame are also in this view.

FIGURE 4 PARTS LIST			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	42429	NH 900 Auger lid cap	1
2	42430	900 Sharpener cover handle	1
3	42431	900 Right Shield Spacer	3
4	42432	NH 900 Right shield rectangle	2

FIGURE 5 PARTS LIST				
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
1	M4622**	Cast Iron idler arm	1	
2	62117	Idler Pin	1	
3	CP316x112	3/16"x1 1/2" Plated cotter pin	2	
4	MW1	1" Machinery washer 14Ga.	4	
5	GF1012	1/8" NPT 45 deg. male zerk	1	
6	GF1011	1/8" NPT Straight male grease zerk	1	
7	P464BIP	4.6" 4-Groove Idler Pulley w/ Bearings	1	
8	BR6304	6304 Idler bearing	2	
9	M4694	4.6" 4-Groove Idler Pulley	1	
10	M4517	SD Idler spacer	1	
11	CS20x80MM10.9	20x80mm 10.9 zinc 2.5pitch bolt	1	

** 2013 & prior, see page 12

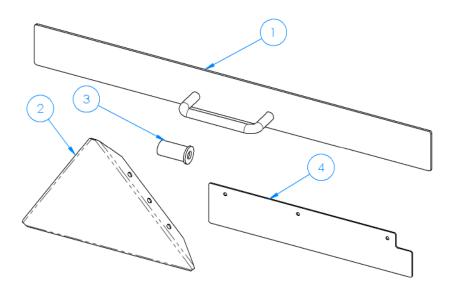


FIGURE 4 Other Parts

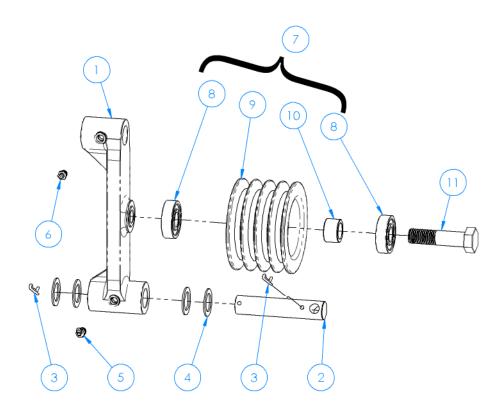


FIGURE 5 42306 Idler Arm

**2013 & PRIOR PARTS LIST				
PAGE/	CURRENT	ράρτ Νο	DESCRIPTION	QTY.
6/1	P1544B	P1244B**	12.4" 4-B SK sheave	Q11.
6/2			5.6" 4-B SD sheave w/2" bushing and keyway	1
6/3	P664BK		4.2" 4-B SD sheave w/2" bushing and keyway	
6 / 4	BB118K-4		BB108K Belts set of 4	1
6/5	42342	Call	Non-stock. Must custom order	1
6 / 6	R9003.0	R900HT4**	Horning 900 or Fp230 Roll (2013 & prior)	2
6 / 7	42343	Call	Non-stock. Must custom order	1
6 / 8	BUSF212	BUSK212**	SK 2 1/2" Bushing	1
6 / 9	42306	N/A	Available as single part. See line 18	1
7 / 10	P424BSB	N/A	Not used on 2013 & prior	0
7 / 11	P704B	N/A	Not used on 2013 & prior	0
7 / 12	BUSK2	N/A	Not used on 2013 & prior	0
8 / 13	42381	HM1240**	Horseshoe catcher	2
8 / 14	42380	N/A	Not used on 2013 & prior	0
8 / 15	42384	N/A	Not used on 2013 & prior	0
8 / 16	42385	N/A	Not used on 2013 & prior	0
8 / 17	D1046	D1045**	Belt part # BB108k-4 decal	1
10 / 18	M4622	42435**	Kp idler arm 2013 & prior	1